200W HAND BLENDER

Model Number: IG8650

INSTRUCTIONS FOR USE

Thank you for purchasing this product.
Please read these instructions carefully before use

Trouble with your hand blender? …

Try our troubleshooting guide on page 4.

If that does not solve the issue contact us …

Tel: 01473 271 272 **Fax:** 01473 270 733
Email: info@igenix.co.uk **Website:** www.igenix.co.uk

Postal Address:
Customer Service Department
Pik-a-Pak Electrical Distributors
38 Bluestem Road,
Ransomes Europark,
Ipswich, IP3 9RR

When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original

SAFETY INSTRUCTIONS

Important: This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Please read all instructions carefully before using the hand blender for the first time.
- Before plugging in the hand blender, check if the voltage indicated on the rating label corresponds with the main voltage in your home.
- This hand blender is for household indoor use only. Never use it outdoors.
- Children should not be allowed to play with hand blender
- Never leave the hand blender unattended whilst plugged into the mains wall socket.
- Close supervision is necessary when the appliance is used around children or persons with reduced physical, sensory or mental capabilities.
- Do not use for anything other than its intended use.
- Do not immerse the motor unit of the hand blender or cord in water or any other liquid.
- Do not use it in a bathroom, near water, or outdoors.
- Keep hands away from the spinning blade.
- Ensure hands and utensils are out of the container when blending to avoid risk of severe injury.
- To avoid risk of severe injury never place the cutting blade on the base without first putting bowl in place properly.
- Do not blend hot food or liquids.
- Do not blend foods containing hard objects that cannot be safely broken up by the blade.
- Do not place hand blender on or near a hot hob / heated oven.
- Maximum operation time under high speed should not exceed 1 minute per cycle. The hand blender will require 10 minute for the motor to cool down between cycles.
- Do not allow the power cord to have over the edge of the counter where it can be pulled by children.
- Do not pull on the cord to disconnect the plug from the mains wall socket.
- Do not use if the power cord or plug is damaged. Do not replace the power cord or any other parts yourself.
- The hand blender should not be used if it has been dropped or if there are visible signs of damage.
- Always unplug the hand blender before assembling, disassembling or cleaning.

SPECIFICATION

Supply Voltage:	220-240V ~ 50Hz
Maximum Output:	200W

IG8650 – Hand Blender at a Glance

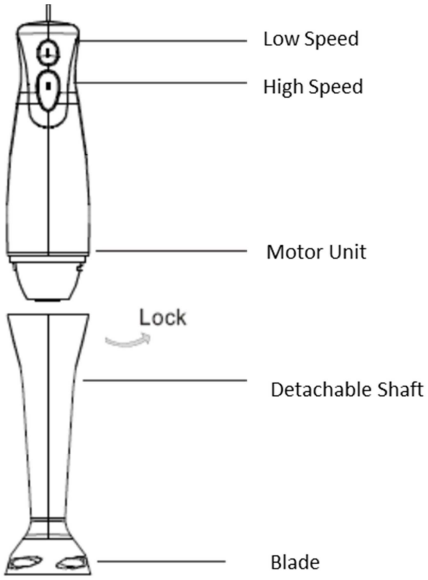

Before First Use

Clean the hand blender by holding inside a cup or bowl of warm water and turning the power on for a few seconds. ***Please Note:*** When cleaning do not run the hand blender for longer than 15 seconds.

Using Your Hand Blender

⚠ Important: The blades are extremely sharp, handle with care. Ensure that the hand blender is unplugged before assembling, disassembling or cleaning the blades.

1. To assemble the detachable shaft with the motor unit, turn the shaft in an anti-clockwise direction until tightened. To disassemble turn clockwise.
2. Plug the hand blender into the mains power outlet.
3. Lower the hand blender into a suitable mixing bowl and depress and hold either the low or high speed switch at the top of the motor unit.
4. To stop the hand blender take your finger off the switch.

Cleaning and Maintenance

- Unplug the hand blender from the mains power outlet.
- Remove the detachable shaft from the motor unit. Do not immerse the motor housing in water or any other liquid.
- Wash the detachable shaft under running water. Place the stem on the draining board upright so that the excess water can drain away. The detachable shaft is dishwasher safe.
- Wipe the motor unit with a soft damp cloth. Do not immerse in water.
- Ensure all parts are dry before re-assembling.

Quick Wash: Clean the hand blender by holding inside a cup or bowl of warm water and turning the power on for a few seconds. ***Please Note:*** When cleaning, do not run the hand blender for longer than 15 seconds.

Troubleshooting

If you are having problems with your product, please use our troubleshooting guide below. If you are unable to resolve the issue using the guide please ring our Customer Service Department on 01473 271 272. Please have the model code, batch number and purchase information available.

Problem	Possible Cause	Solution
The hand blender does not work.	1. Motor unit and shaft not connected correctly. 2. Not properly plugged into the mains wall socket. 3. No electricity in the mains wall socket. 4. The motor may have overheated	1. Check that the shaft and motor units are connect correctly. 2. Plug in firmly. 3. Check fuse or breaker. 4. The blender should only be run continuously for a maximum time of 1 minute to prevent the motor from over heating. After1 minutes use allow the hand blender to cool down for 10 minutes.

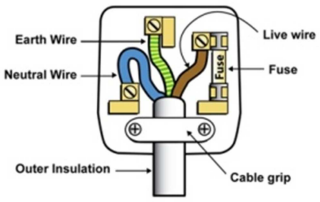

This hand blender must be earthed. Fit a 3A fuse in a 13A BS1363 plug. Fit the green/yellow wire to E, the blue wire to N and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is fitted. If you remove the plug, dispose of it.

Guarantee Information

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.
The warranty **does not** cover consumable parts that require replacement under normal use or accessories. This includes beaker, belts, and accessory attachments.

1. If a fault develops within 28 days of purchase the item should be returned to the place of purchase for exchange.
2. If the fault develops after 28 days and within 24 months of purchase please contact our customer service department 01473 271 272 or write to us at the address detailed on page 5.

Please quote the model number which begins **IG**, the 'Batch Number' beginning **'5'** and give details of the exact fault.

We will then decide whether to repair or replace the item. You will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced under guarantee within 2 years, the guarantee for the replacement item will be calculated from the purchase date of the original.

Before calling the Customer Service number please ensure you have checked the Troubleshooting guide.

iGENIX

Tel: 01473 271 272 **Fax:** 01473 270 733
Email: info@igenix.co.uk **Website:** www.igenix.co.uk

Postal Address:
Customer Service Department
Pik-a-Pak Electrical Distributors
38 Bluestem Road,
Ransomes Europark,
Ipswich, IP3 9RR

When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original

Disposal of Old Electrical Appliances

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

Disclaimer

Updates to hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.

Follow us on Twitter
@Igenix_Products

View the range online at www.igenix.co.uk